


Lace J - Sensor

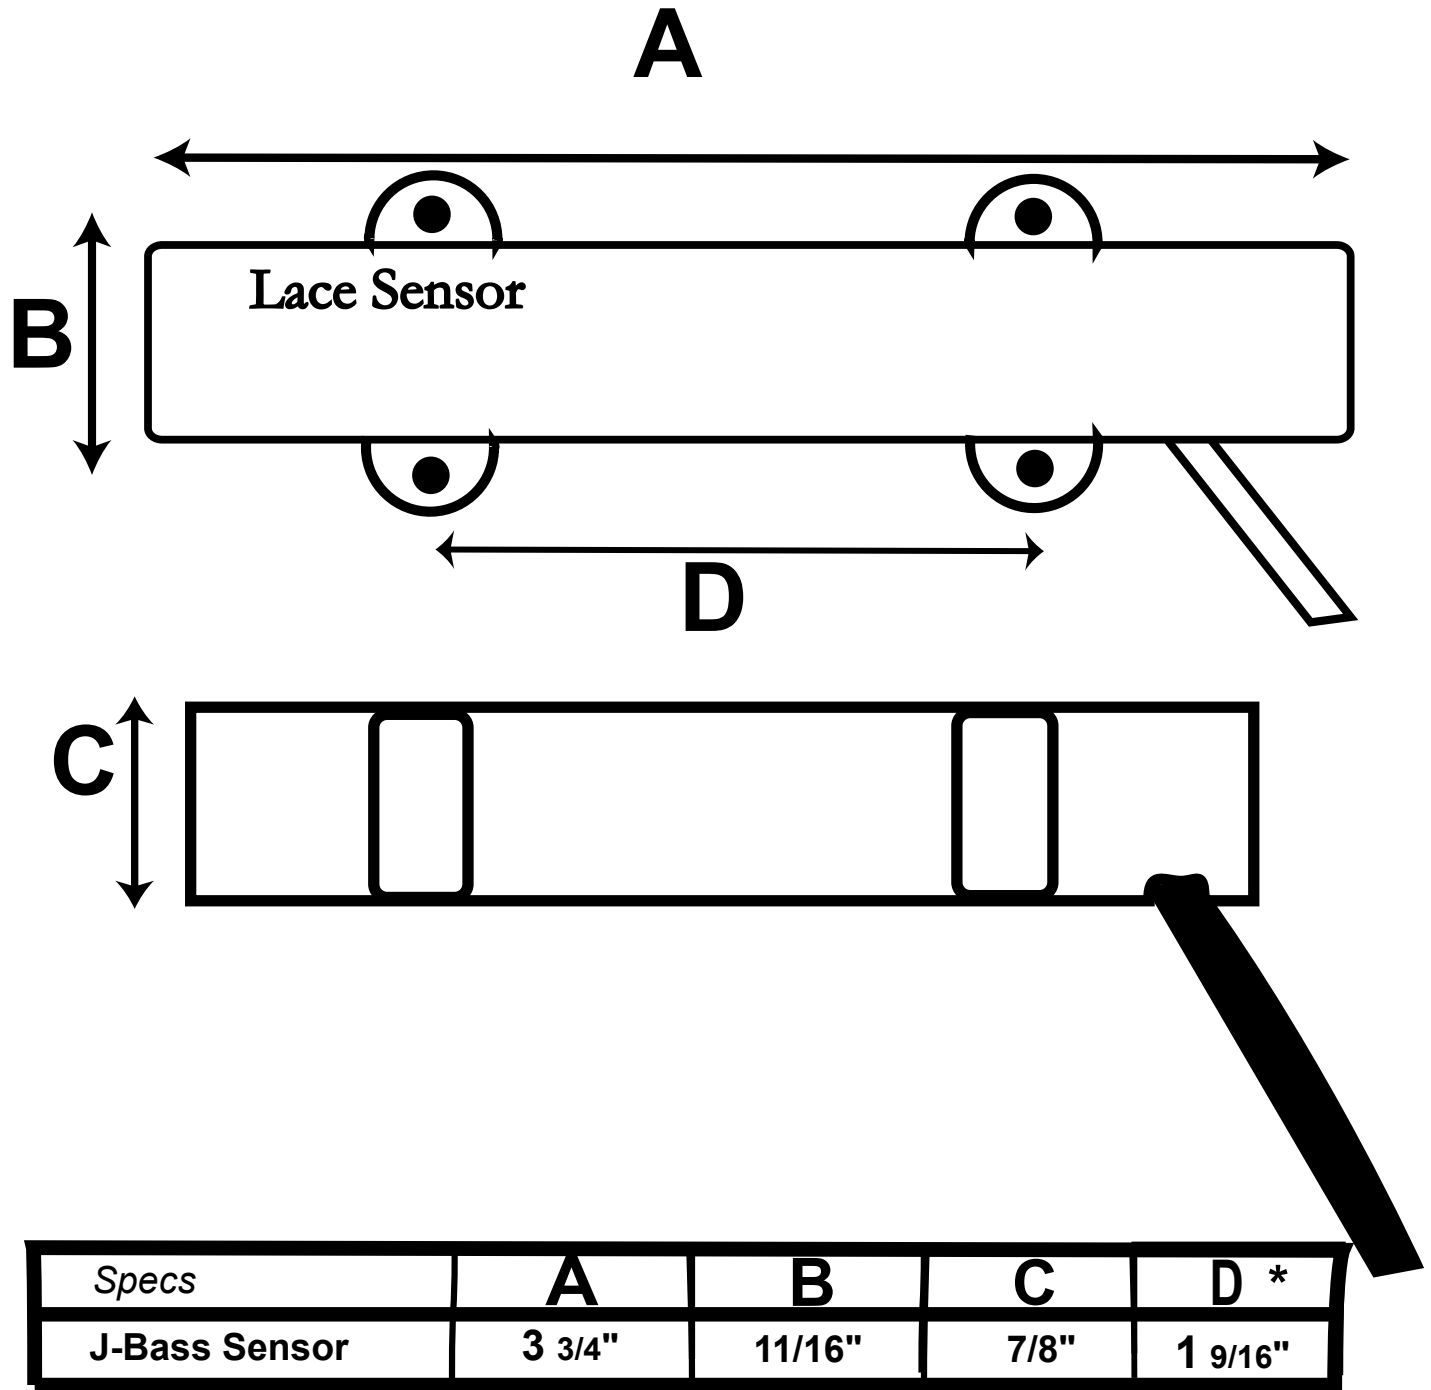

* - Measurement is from center of screw hole to center of screwhole.